

Generic USB Handbrake Mounting Bracket Kit

Assembly Manual

And

Optional Accessories



Assembly instruction manuals available at:

V1.2 021022

<https://simfab.com/webmanuals.html>

by **SimFab**.com

WARNINGS:



Proceed with caution and extra attention when warning signs are present during installation instructions manual.



If your item is damaged, defective or missing parts, please contact us first directly at Email: info@SimFab.com or Toll Free: **1-888-299-2746**

As the manufacturer, our knowledge of your new product ensures that we will be able to assist you promptly and accurately.

For invoices and other price information, please refer to your market place account for more details. Alternatively, you can always email us at info@SimFab.com

Table of Contents

| | |
|---|----|
| SimFab Modular Flight Simulation Concept And Design Intent..... | 5 |
| Parts list..... | 10 |
| Handbrake to adapter bracket installation..... | 11 |
| Adapter bracket to upper L bracket installation..... | 14 |
| Manual shifter installation to Upper L bracket..... | 15 |
| Extension T tube installation..... | 16 |
| Lower L bracket installation..... | 16 |
| Accessories | 18 |
| Specifications, Warranty, Terms and Conditions..... | 40 |

Parts list

1. Handbrake adapter bracket

2. Extension T tube

⚠ Use manual shifter universal side bracket kit from base package: Gen3 OpenWheeler sim racing cockpit. In case you are missing the kit, please reach out to us for replacement. Also available for purchase here: <https://amzn.to/33hTEqA>

3. Extension T tube hardware:

bolts (2)

4. Handbrake adapter bracket to upper L bracket mounting hardware:
bolts (2), washers (2)

5. USB generic handbrake mounting hardware:
bolts (4); washers (8); lock washers (4); nuts (4)

6. Mounting hardware for Logitech and Thrustmaster manual shifters:
bolts (2); washers (2)

⚠ Replace standard bolts included in OpenWheeler Gen3 cockpit with longer bolts included in this package.

7. Assembly manual booklet

Use wrenches included in base package: Gen3 OpenWheeler sim racing cockpit:


* 5mm Hex key

* 8mm Hex key

* 10mm combo flat wrench

* 13mm combo flat wrench

1. Mount handbrake on either pair of 4 holes of handbrake adapter bracket, depending on preferred distance between handbrake and manual shifter levers.

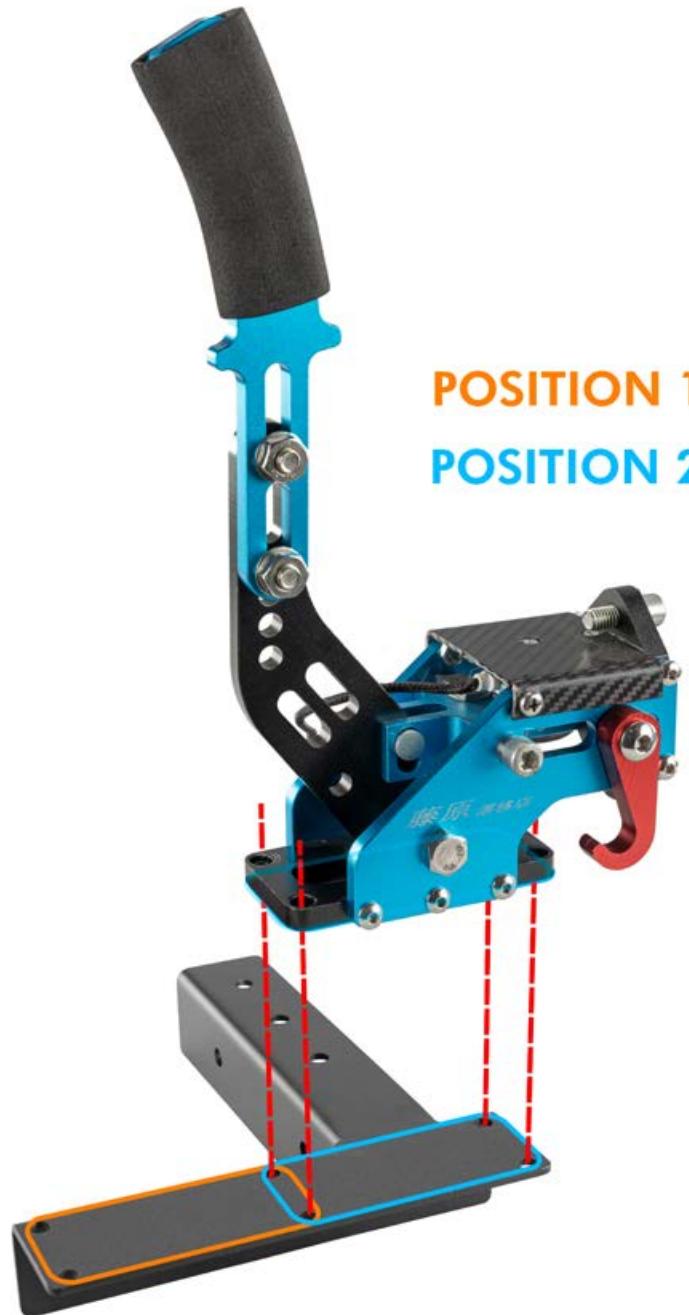

2. Install M6/20mm bolts, **upside down**, washers on both sides.



3. Mount generic handbrake bracket on universal upper L bracket.

 Install pair of M8/50mm bolts through either front side (with use of Logitech or Thrustmaster shifters) or top side (with use of Fanatec shifter)



Bolts direction
with Logitech
or Thrustmaster
manual shifters



Bolts direction with
Fanatec manual
shifters

4. Install manual shifter



Fanatec manual
shifter

 Use
shifter mounting
hardware included
in OpenWheeler
Gen3 cockpit base
package



Logitech manual
shifter

 Use shifter
mounting hardware
included in this kit



Thrustmaster
manual shifter

 Use shifter
mounting hardware
included in this kit

5. Install extension T tube optional if you need longer or shorter arm reach independently from seat sliders.



6. Install lower L bracket from either rear or front side, whether you need longer or shorter arm reach.



7. Install upper L bracket.

Adjust all brackets accordingly to optimal comfort and re-tighten all bolts, and knobs.



